

M·A·N



Buses

Driver's Handbook

Wishing you safe driving!

This manual contains all the information you need on the principal features of your M.A.N. bus. It is divided into the following sections:

OPERATION	Pages 4 to 66
MAINTENANCE	Pages 57 to 115
TECHNICAL DATA	Supplement

The MAIN MANUAL contains information applying to buses in general;

the SUPPLEMENT contains specific details referring to your own bus.

The list of CONTENTS on the following page and an alphabetical ITEM REFERENCE LIST at the back of the main manual will help you to locate the details you require.

Correct operation of the controls and punctual maintenance - which can include replacing parts before they actually fail or become unserviceable - will ensure that your vehicle always operates reliably and is safe on the roads.

A network of service workshops is at your disposal for this purpose, and M.A.N. operates branches or has appointed agents in most European and other countries to provide the necessary technical backing and to supply parts.

On taking delivery of this vehicle you will have received a blue DATA CARD;

this card contains all the important details needed when your vehicle is brought into the workshop or when spare parts are purchased. Keep the card in a safe place so that it can be supplied to the workshop in such cases.

It is good practice to carry the operating manual, the data card and the list of M.A.N. service workshops on the vehicle at all times, as you may need this information urgently in the event of a breakdown.

Subject to engineering modifications in the course of continuing development work.

M·A·N
COMMERCIAL VEHICLE DIVISION

CONTENTS

IDENTIFICATION DATA	Page 3	LUBRICATION CHARTS	Page 71-74
OPERATION	4	FUELS, LUBRICANTS ETC	75
CONTROLS, SWITCHES; INSTRUMENTS	4	GENERAL CARE AND MAINTENANCE	78
HEATING AND VENTILATION	19	ENGINE	78
BRAKES	25	AIR CLEANER	81
MAINTENANCE FLAPS	33/34	COOLING SYSTEM, HEATER	83
PREPARING TO DRIVE THE VEHICLE	35	V-BELTS	86
STARTING AND STOPPING THE ENGINE	41	FUEL SYSTEM	89
DRIVING AWAY FROM A STANDSTILL, GEAR SHIFT	42	STEERING	91
RUNNING IN	57	BRAKES	92
NORMAL DRIVING	57	CLUTCH	94
COLD WEATHER OPERATION	64	GEARBOX	95
MAINTENANCE	67	DRIVEN AXLES	103
MAINTENANCE AND LUBRICATION SCHEDULES	68	PROPELLER SHAFTS	106
		ELECTRICAL SYSTEM	106
		ITEM REFERENCE LIST	117
		TECHNICAL DATA	see Supplement

IDENTIFICATION DATA

The STANDARD BUS range of vehicles has been conceived as a modular design system, so that the specifications can be varied to suit actual operating conditions. This operating manual covers all the versions which the manufacturers supply.

Before studying this manual in detail, you are therefore recommended to make a careful note below of the vehicle's precise type reference and of the remaining data shown here. It is then easier to recognize those instructions that apply to your vehicle.

VEHICLE TYPE:

CHASSIS NO.:

ENGINE TYPE:

MAIN GEARBOX TYPE:


No.:

No.:


The above data can be taken from the blue data card supplied with the vehicle.

When making enquiries or purchasing spare parts at our agents or workshops, it is sufficient to quote the vehicle type and chassis number. Presentation of the data card, however, will help our service workshops to provide your vehicle with the correct and reliable attention it deserves.


Type plate

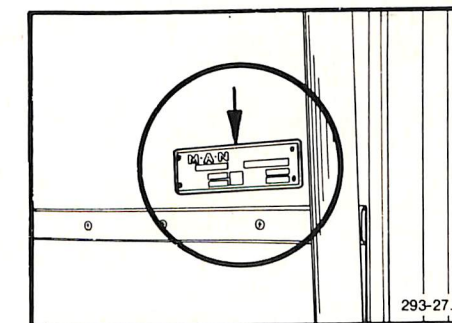


Chassis No.

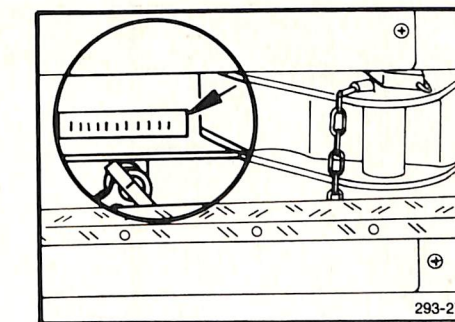

Engine No.

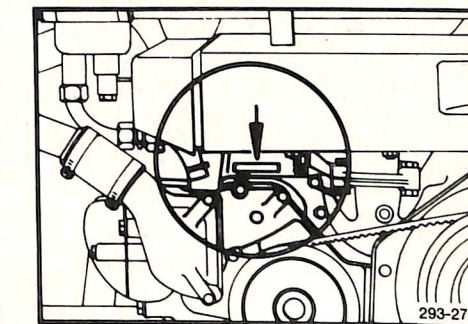

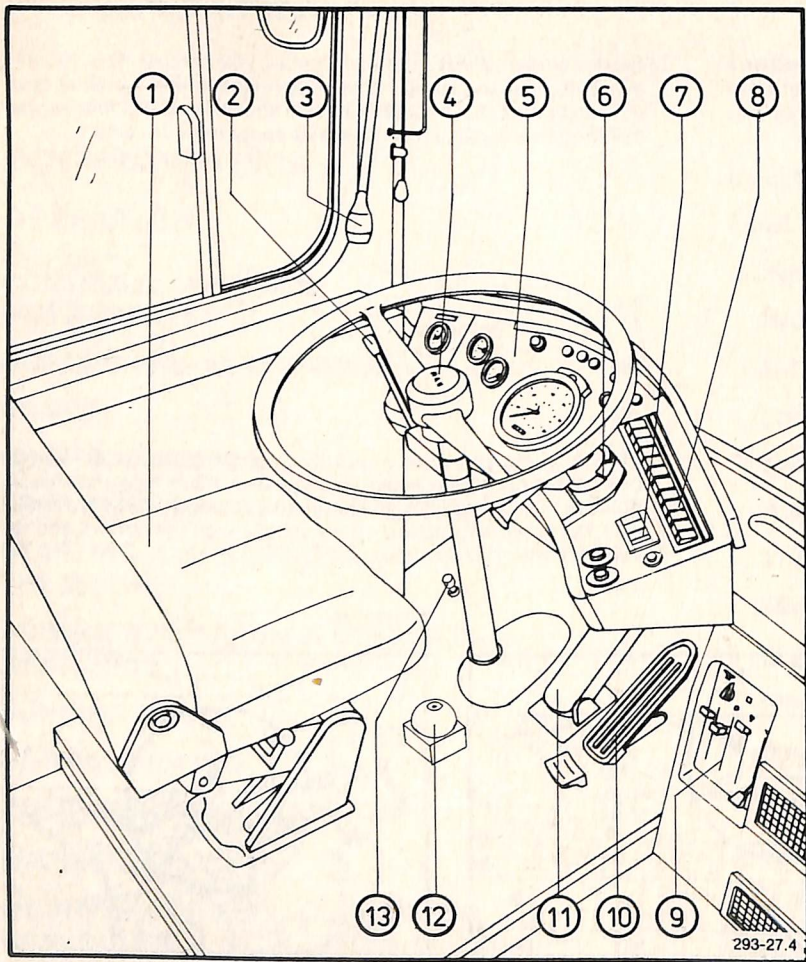

OPERATION

CONTROLS, SWITCHES, INSTRUMENTS


Cab interior (SL, SG)

- 1 Driver's seat (adjustable)
- 2 Turn indicator switch
- 3 Microphone
- 4 Horn push
- 5 Instrument panel
- 6 Parking brake (handbrake) lever
- 7 Push button for automatic transmission
- 8 Rocker switch panel
- 9 Heating and ventilation control panel
- 10 Accelerator pedal
- 11 Service (foot) brake
- 12 Foot-operated loudspeaker switch
- 13 Low beam (dip) switch

293-27.4

Cab interior (SÜ)

- 1 Driver's seat (adjustable)
- 2 Turn indicator switch, low beam (dip) switch
- 3 Microphone
- 4 Push horn
- 5 Instrument panel
- 6 Parking brake (handbrake) lever
- 7 Rocker switch panel
- 8 Heating and ventilation control panel
- 9 Accelerator pedal
- 10 Service (foot) brake
- 11 Gear lever
- 12 Clutch pedal

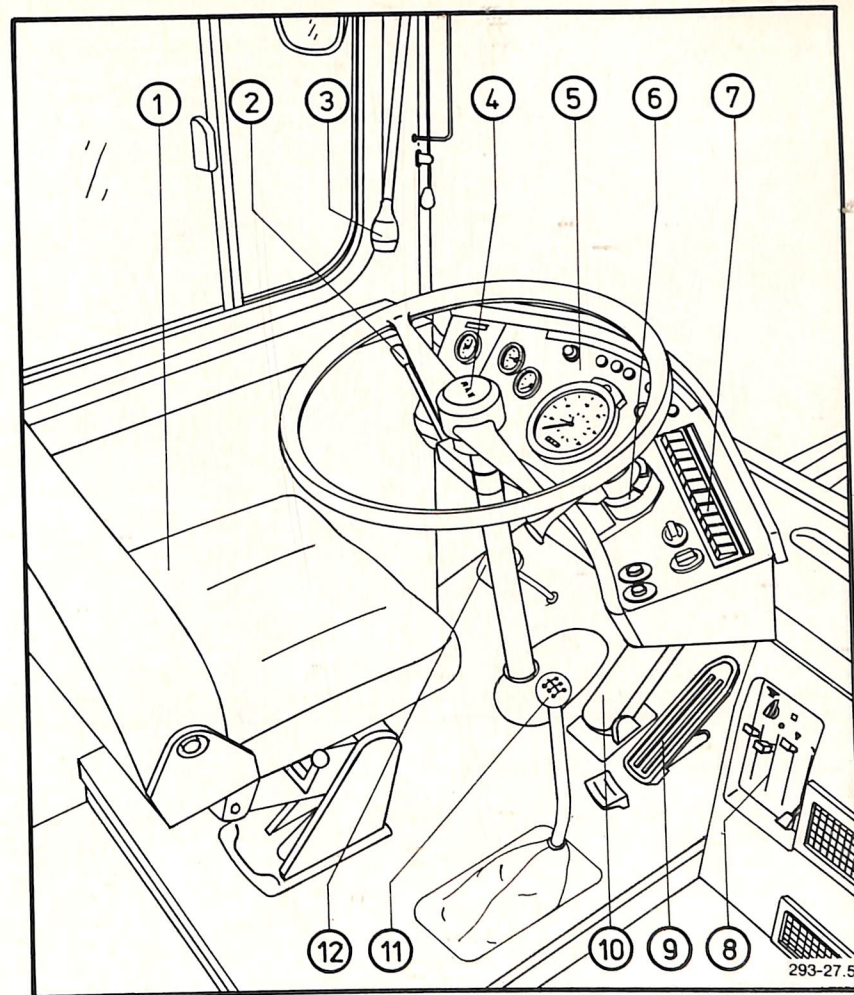

293-27.5

ITEM REFERENCE LIST

	Page		Page
Air cleaner	81	Economical driving	58
Air suspension testing	39	Electrical system	106
Antifreeze	66	Electromagnetic retarder	32
Auxiliary heater	23	Enclosed engine	79
		Engine brake - foot-operated switch	31
Battery, care of	107	Engine brake	31
Battery change	107	Engine number	3
Brake adjustment	92	Engine operating temperature	57
Brake cam shafts - lubrication with grease gun	93	Engine speed	58
Brake filler valve	29	Engine - starting and stopping	41
Brake linings	93		77
Brake release - with compressed air	29	Fuel	89
Brake release - without compressed air	30	Fuel filter - cleaning, renewing	6-12
Brake testing	26	Fuel gauge	91
Brakes	25	Fuel system - bleeding	75
Breather - cleaning	105	Fuels and lubricants	109
		Fuses	42/43
Central lubrication	39	Gearbox gate patterns	42
Central warning light	17	Gear shift	108
Chassis number	3	Headlight bulb changing	16
Circuit diagrams	111-115	Headlight dip (low beam) switch, foot-operated	19
Clutch hydraulic fluid - checking level	94	Heater	3
Combined switch	15		6-12
Compressed air reservoirs - draining condensate	65	Identification data	6-12
Contents list	2	Instrument panel	1
Continuous brake	31	Interior lighting	40
Coolant	77	Journey recorder	16
Cooling system - checking level	37	Lights	77
Cooling system - draining and refilling	83/85	Lubricants	115
Cooling system	37		
Door operation	13		
Driver's cab	4		
Driving away from a standstill, gear shift	42		

Lubrication chart symbols	70	Service brake	26
Lubrication charts	71-74	Snow chains	65
Maintenance	67	Spare wheel	62/63
Maintenance flaps	34	Spring-action brake cylinders - releasing	30
Maintenance - general care	78	Starting aid	42
Normal driving	57	Steering hydraulic fluid - checking level	91
Oil change:		Steering play	39
Hydromedia 2 HP 45 (ZF)	100	Stop brake	28
Hydromedia 3 HM 60 (ZF)	102	Tachograph	40
Rear axle	104	Technical data	Supplement
VOITH 506 gearbox	97	Telltale lights	6-12
Oil filter - cleaning and renewing:		Telma retarder - lubrication with grease gun	94
Hydromedia 2 HP 45 (ZF)	101	Tire inflation	63
Hydromedia 3 HM 60 (ZF)	102	Tires	65
RENK-Doromat 873/874	96	Towing away	59
VOITH 506 gearbox	97	Transmission:	
VOITH 851/854 gearbox	99	Hydromedia 2HP 45 (ZF)	51
Oil level - checking:		Hydromedia 3 HM 60 (ZF)	54
Automatic supply system	36	RENK-Doromat 873/874	44
Central lubrication	39	Synchronesh gearbox (ZF)	42/43
Hydromedia 2 HP 45 (ZF)	100	VOITH 506 gearbox	47
Hydromedia 3 HM 60 (ZF)	101	VOITH 851 gearbox	48
Rear axle	104	VOITH 854 gearbox	49
VOITH 506 gearbox	96	Transmission brake	32
Oil pressure	57	Type plate	3
Parking brake	27	V-belt tensioning	86
Power steering failure	58	Ventilation	19
Preparing to drive vehicle	35	Vents:	
Propeller shafts - lubrication with grease gun	106	Lift-up	24
RENK-Doromat 873/874 - checking fluid level	95	Roof	25
Retarder	31	VOITH 851/854 - checking fluid level	98
Rocker switches	6-12	Wheel changing	62
Running in	57	Wheel nuts	62
		Windshield washer - checking fluid level	38
		Winter operation	64

M·A·N

COMMERCIAL VEHICLE DIVISION
Munich Works

Print no. 81.99293.8029e-10.77-1.2